



USER MANUAL

Elo Temperature Sensor Pro



No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Disclaimer

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively “Elo”) makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to Revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

Trademark Acknowledgments

Elo, the Elo Logo, Elo Access and Elo Edge Connect are either trademarks or registered trademarks of Elo Touch Solutions, Inc. All other trademarks are the property of their respective owners. © 2020 Elo Touch Solutions, Inc. All rights reserved.

Table of Contents

Section 1: Introduction 4

Section 2: Installation 5

Section 3: Technical Specification 9

Section 4: Technical Support10

Section 5: Safety 11

Section 6: Regulatory Information 12

Section 7: Warranty Information..... 15

Section 8: Attention Information 16

Section 1: Introduction

Product Description

Utilizing an infrared bolometer (thermometer) and 2D camera, the Elo Access™ Temperature Sensor Pro offers heatmap temperature reading. With no alignment needed, the temperature sensor can detect faces, automatically adjust based on height and output temperature data for each person detected in the field of view (FOV).

Precautions

Follow all warnings, precautions and maintenance as recommended in this user manual to maximize the life of your unit and prevent risks to user safety. See Section 5 for more information on safety.

This manual contains information that is important for the proper setup of the Temperature Sensor Pro. Before setting up and powering on your new Temperature Sensor Pro, read through this manual, especially the Installation, configuration, and operation chapters.

Section 2: Installation

Unpacking the Temperature Sensor Pro

Verify that the box contains:

- Temperature Sensor Pro
- Quick Install Guide
- 2 mounting screws
- 2 screw covers
- 1 cable

Installing the Temperature Sensor Pro

Follow steps 1 through 6 to connect the Temperature Sensor Pro to the Edge Connect port on the display. Once complete, connect the power splitter to the display.




1. Some systems have more than one mounting option. Select the top location to mount the Temperature Sensor Pro.



2. Remove the selected peripheral cover from the display head to expose the peripheral bay.



3. Gently press the Temperature Sensor Pro into the peripheral bay making sure the connector is mated.

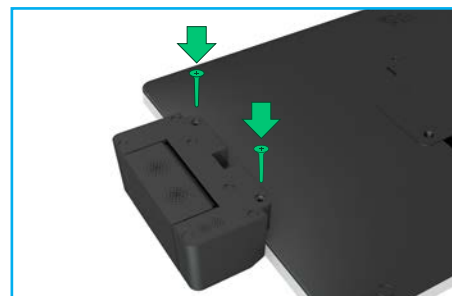

4. Install the 2 flat head screws included with the Temperature Sensor Pro.



5. Remove the protective film from the included mylar covers and place the covers over the screws.




6. Connect the micro-USB cable to another Edge Connect port to provide additional power for the Temperature Sensor Pro.

Installing the Touch Technology Software Drivers


For use with Windows Systems:

- Visit www.elotouch.com/products for technical specification for the driver to download and install.
- Temperature Sensor Pro Driver


1. Open Device Manager.
Then double click "Magnity Thermal Camera"

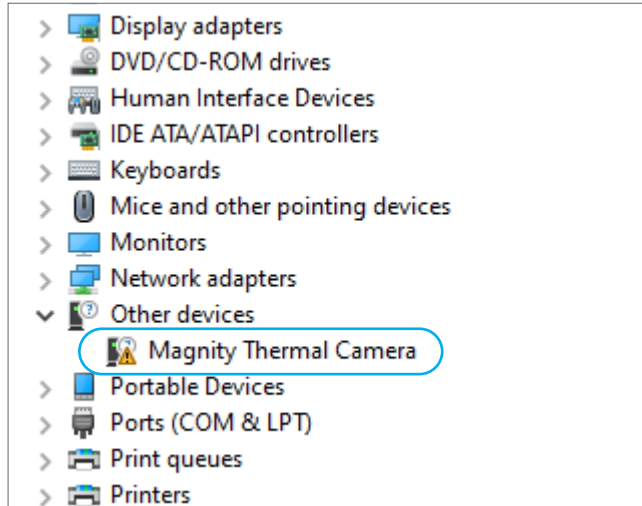


2. Press "Update Driver"

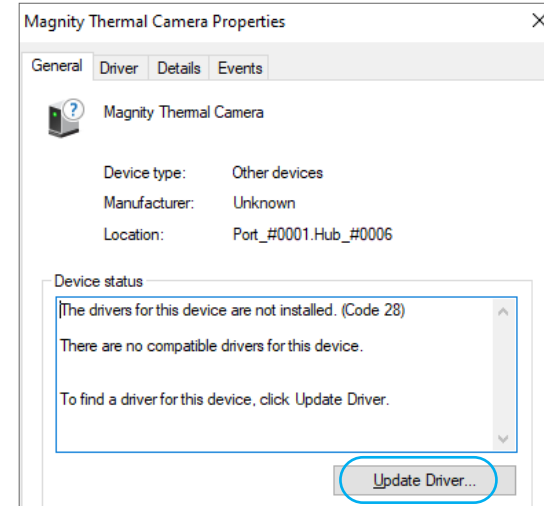


3. Press "Browse my computer for drivers"

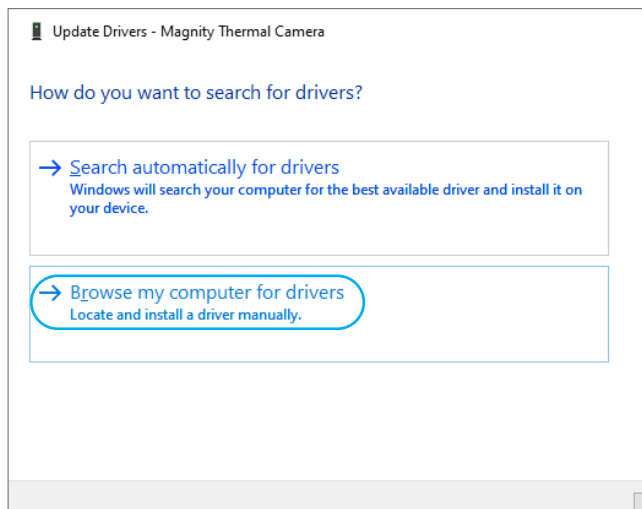


4. Press "Let me pick from a list of available drivers on my computer"

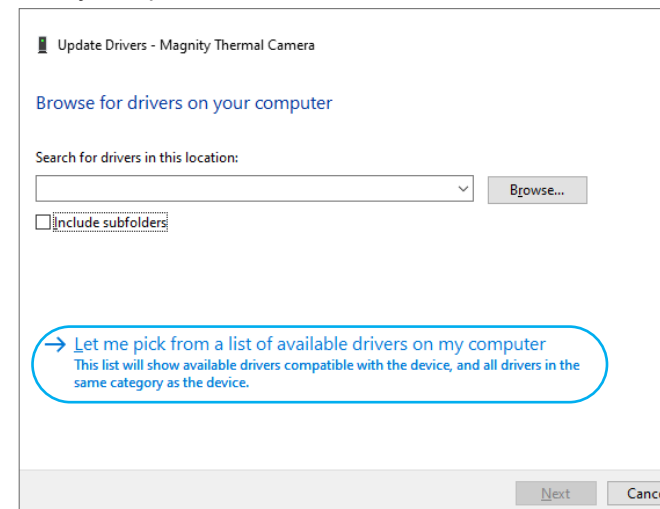


5. Press “Next”

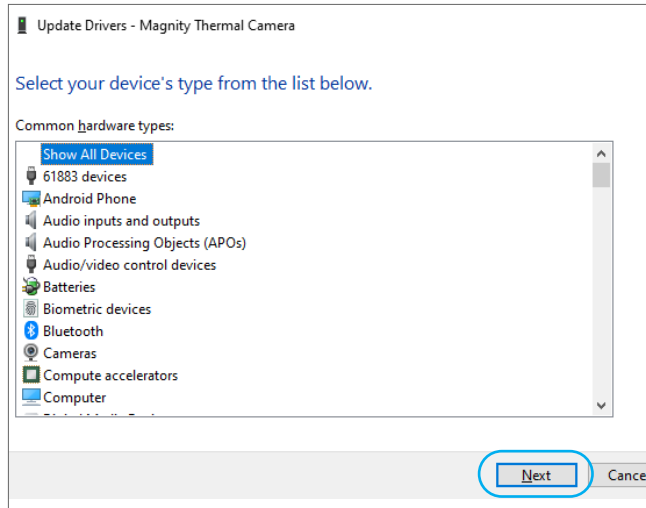


6. Press “Have Disk”. Then in the pop-up dialog, select “Thermal_Camera.inf”

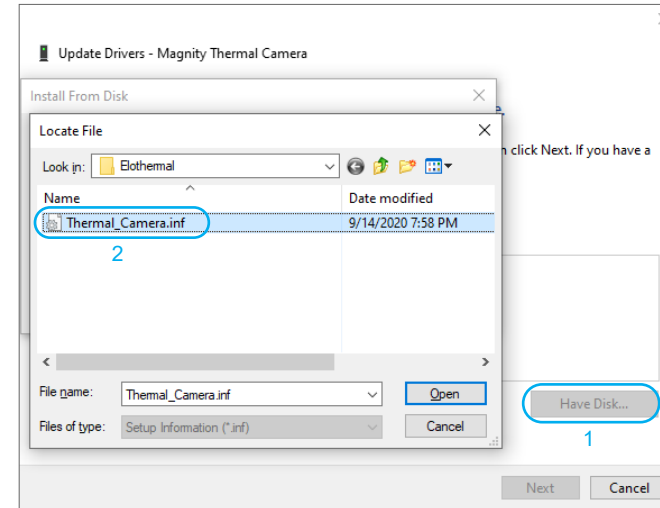

7. Press “Next”

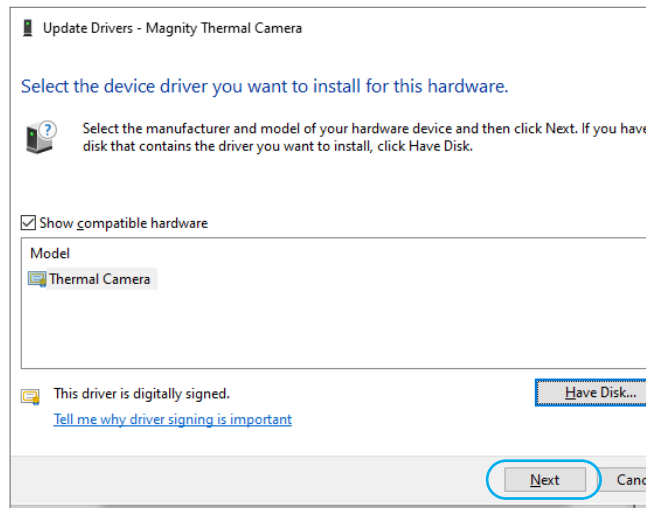

8. After dialog shows “Windows has successfully updated your drivers”, press “Close”

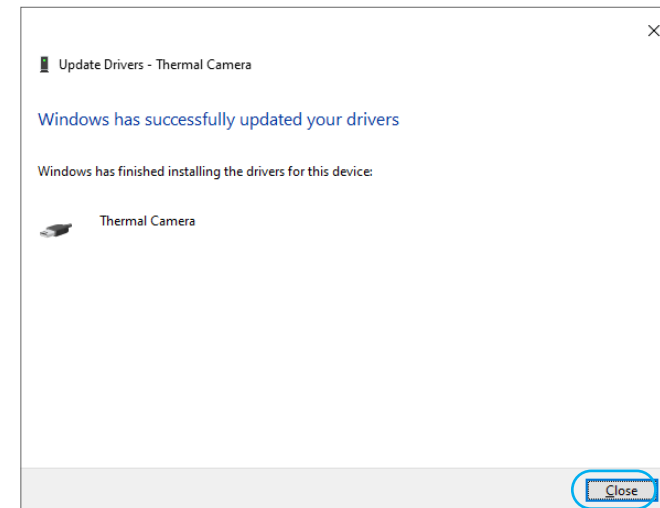

For use with Android systems

- Use the Temperature Sensor Pro in the default mode of the system.
- Run the application.

Section 3: Technical Specification

Measurement Distance

Smart mode and expert mode are suggestions to software application. Customer is the development owner of software application.

Smart mode:

Measure distance to customer: 24 inches

Measure height of customer: 5 feet to 6.5 feet

The Temperature Sensor Pro is able to auto adjust camera angle to detect object and read temperature data.

Expert mode:

Measure distance to customer: 12 inches - 40 inches

Measure height of customer: 5 feet to 6.5 feet

The Temperature Sensor Pro is able to detect object and read temperature data in this range.

Temperature

Temperature measurement range: 30°C – 45°C

Temperature accuracy: +/- 0.5°C @ ambient temperature 20 - 30°C; 1°C @ ambient temperature > 30°C

Section 4: Technical Support

Technical Assistance

Technical Specifications

visit www.elotouch.com/products
for technical specifications for this device

Support

visit www.elotouch.com/support
for online self-help and technical support

See this user manual's last page for worldwide technical support phone numbers.

Contact us to get Windows and Android SDK for developers to use.

Section 5: Safety

Waste Electrical & Electronic Equipment Directive (WEEE)



This product should not be disposed of with household waste. It should be deposited at a facility that enables recovery and recycling.



Elo has put in place recycling arrangements in certain parts of the world. For information on how you can access these arrangements, please visit www.elotouch.com/e-waste-recycling-program/.

Section 6: Regulatory Information

Electrical Safety Information

Compliance is required with respect to the voltage, frequency, and current requirements indicated on the manufacturer's label. Connection to a different power source than those specified herein will likely result in improper operation, damage to the equipment or pose a fire hazard if the limitations are not followed.

There are no operator serviceable parts inside this equipment. There are hazardous voltages generated by this equipment which constitute a safety hazard. Service should be provided only by a qualified service technician.

Contact a qualified electrician or the manufacturer if there are questions about the installation prior to connecting the equipment to mains power.

Emissions and Immunity Information

Notice to Users in the United States: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Notice to Users in Canada: This equipment complies with the Class A limits for radio noise emissions from digital apparatus as established by the Radio Interference Regulations of Industrial Canada.

Notice to Users in the European Union: Use only the provided power cords and interconnecting cabling provided with the equipment. Substitution of provided cords and cabling may compromise electrical safety or CE Mark Certification for emissions or immunity as required by the following standards:

This Information Technology Equipment (ITE) is required to have a CE Mark on the Manufacturer's label which means that the equipment has been tested to the following Directives and Standards: This equipment has been tested to the requirements for the CE Mark as required by EMC Directive 2014/30/ EU as indicated in European Standard EN 55032 Class A and the Low Voltage Directive 2014/35/EU as indicated in European Standard EN 60950-1.

General Information to all Users: This equipment generates, uses and can radiate radio frequency energy. If not

installed and used according to this manual the equipment may cause interference with radio and television communications. There is, however, no guarantee that interference will not occur in any particular installation due to site-specific factors.

1. In order to meet emission and immunity requirements, the user must observe the following:
 - a. Use only the provided I/O cables to connect this digital device with any computer.
 - b. To ensure compliance, use only the provided manufacturer's approved line cord.
 - c. The user is cautioned that changes or modifications to the equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. If this equipment appears to cause interference with radio or television reception, or any other device:
 - a. Verify as an emission source by turning the equipment off and on. If you determine that this equipment is causing the interference, try to correct the interference by using one or more of the following measures:
 - i. Move the digital device away from the affected receiver.
 - ii. Reposition (turn) the digital device with respect to the affected receiver.
 - iii. Reorient the affected receiver's antenna.
 - iv. Plug the digital device into a different AC outlet so the digital device and the receiver are on different branch circuits.
 - v. Disconnect and remove any I/O cables that the digital device does not use.
(Unterminated I/O cables are a potential source of high RF emission levels.)
 - vi. Plug the digital device into only a grounded outlet receptacle. Do not use AC adapter plugs. (Removing or cutting the line cord ground may increase RF emission levels and may also present a lethal shock hazard to the user.)

If you need additional help, consult your dealer, manufacturer, or an experienced radio or television technician.

Agency Certifications

The following certifications and marks have been issued or declared for this peripheral:



Power Specifications

Electrical Ratings

Input	5VDC
-------	------

Operating Conditions

Temperature	10°C-30°C
Humidity	20% to 80% (non-condensing)

Storage Conditions

Temperature	-20°C - 50°C
Humidity	5% to 95% (non-condensing)

Section 7: Warranty Information

For warranty information, go to <https://www.elotouch.com/support/warranty>


Section 8: Attention Information

Legal Disclaimer

The Elo Access Temperature Sensor Pro is not intended to diagnose, treat, cure, mitigate, or prevent any disease or health condition, including COVID-19. An indication of an elevated body temperature should be confirmed by a secondary evaluation method (such as a non-contact infrared thermometer or clinical grade contact thermometer). Use only as directed; various environmental and methodological factors can impact thermal imaging. HIPAA compliance is responsibility of user. This is not an FDA-approved device. Not available in all areas.

Tips:

For wall-mount of 22 inch Elo displays, ensure effective space size (from rear shell to wall) >15 mm

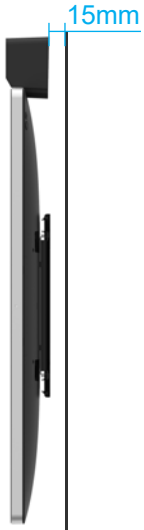

The focal length of the camera is available by default. If it needs to be adjusted, please manually rotate the outer ring of the camera clockwise or counter clockwise.



For the accuracy of temperature, please use the Temperature Sensor Pro after turning it on for 5 minutes.

When the application is first launched, if the image has an X-axis and Y-axis offset, user needs to run the coordinate calibration function at a distance of 24 inches from the device, which relies on the ISV to match the image of the infrared camera with the image of the RGB camera.

Two ways to calibrate the Temperature Sensor Pro:

- Open the test application from Elo and press the “X+/X-/Y+/Y-” buttons to calibrate it.
- Use the software provided by ISV to calibrate it.



Before Calibration



After Calibration

Notes

EloTouch.com

Visit our website for the latest

- Product Information
- Specifications
- Upcoming Events
- Press Releases
- Software Drivers

Learn more about Elo at [EloTouch.com](https://elotouch.com).

North America

Tel +1 408 597 8000

Fax +1 408 597 8001

customerservice@elotouch.com

Europe

Tel +32 (0)16 70 45 00

Fax +32 (0)16 70 45 49

EMEA.CS@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385

Fax +86 (21) 3329 1400

EloAsia@elotouch.com

